


# Privia

# PX-850

## QUICK GUIDE FOR USB AUDIO RECORDING AND PLAYBACK

### USB Audio Recording

1. Make sure a USB drive is connected and formatted. See page E-26 of the owners manual on how to format the USB drive.
2. **QUICKLY** press the **AUDIO RECORDER** button. This button doubles as a *Function* button, so only press it quickly to get it in the audio recording mode. The two lights above the **SONG ▶/■** button will light up.

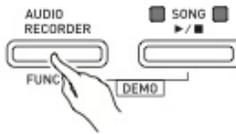

3. Press the **SONG RECORDER** button, it will also light up.



4. The audio recorder is now ready. Play the keyboard and the PX-850 will begin capturing your performance as a .wav file. The **SONG RECORDER** button light will flash briefly when you begin playing to indicate that it is recording.
5. To stop recording, press the **AUDIO RECORDER** button. The two **SONG ▶/■** lights will flash when it has finished writing the .wav file to the USB drive.

*The PX-850 is still in audio recording mode, you can start playing again to make an additional recording.*

### USB Audio Playback

1. To play back a recording you have just made, press and *HOLD* the **AUDIO RECORDER** button and press the **SONG ▶/■** button.
2. If you want to play back specific audio files from the USB drive without previously making a recording, make sure that the audio mode is enabled by following steps 2 and 3 in the USB Audio Recording section above.
3. To select a specific audio recording, press and hold the **FUNCTION** button and use the **SONG SELECT** keys on the keyboard labeled - / + 0 - 9. A two digit entry is required, so if you want to choose file TAKE03.wav you need to enter 0 then 3.
4. To begin playback of the selected .wav file, press and *HOLD* the **AUDIO RECORDER** button then press the **SONG ▶/■** button.